


Panorama Led White

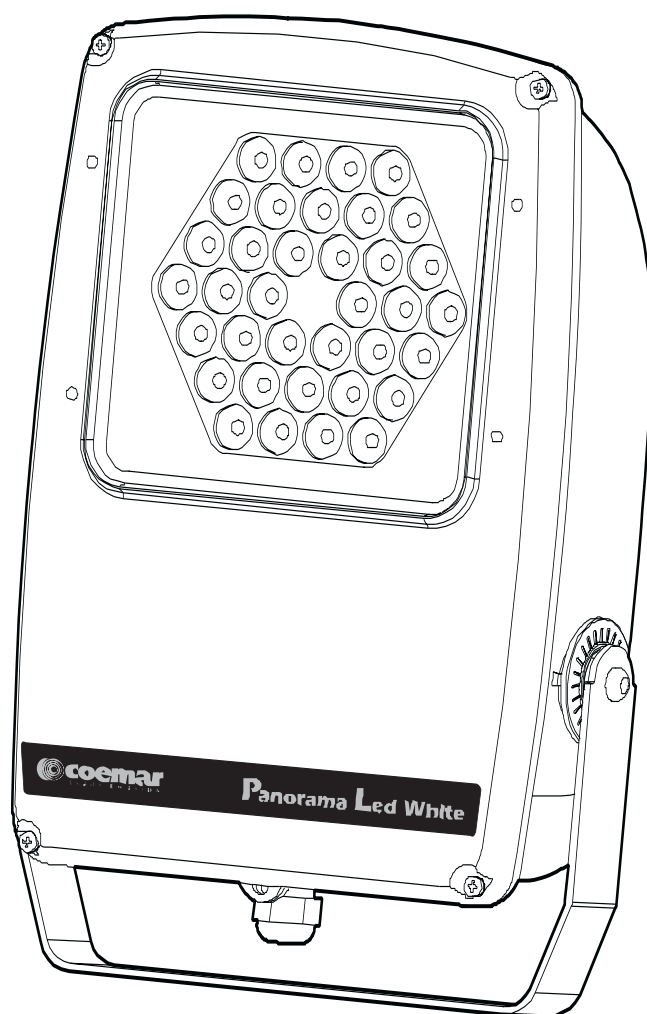

**manuale di istruzioni
instructions manual**

1^a edizione Maggio 2005
1st edition May 2005

 **coemar**
L I G H T E M O T I O N

Panorama Led White

numero di serie/serial number

data di acquisto/date of purchase

fornitore/retailer

indirizzo/address

cap/città/suburb

provincia/capital city

stato/state

tel./fax/

Prendete nota, nello spazio apposito, dei dati relativi al modello e al rivenditore del vostro **Panorama Led White**: in caso di richiesta di informazioni, pezzi di ricambio, servizi di riparazione o altro ci permetteranno di assistervi con la massima rapidità e precisione.

*Please note in the space provided above the relative service information of the model and the retailer from whom you purchased your **Panorama Led White**: This information will assist us in providing spare parts, repairs or in answering any technical enquiries with the utmost speed and accuracy.*

ATTENZIONE: la sicurezza dell'apparecchio è garantita solo con l'uso appropriato delle presenti istruzioni, pertanto è necessario conservarle.

WARNING: the security of the fixture is granted only if these instructions are strictly followed; therefore it is absolutely necessary to keep this manual.

Index

1. Packaging and transportation	Pag. 6
1.1. Packaging	“ 6
1.2. Transportation	“ 6
2. General information	Pag. 6
2.1. Important safety information	“ 6
2.2. Warranty conditions	“ 6
2.3. CE Certification	“ 6
3. Installation and connection	Pag. 7
3.1. Projector components	“ 7
3.2. Dimensions	“ 7
3.3. Installation	“ 8
3.4. Attaching a safety chain	“ 8
3.5. Adjusting beam direction	“ 9
3.6. Opening and closing up the projector	“ 9
3.7. Adjusting the beam angle	“ 10
4. Powering up	Pag. 11
4.1. Operating voltage and frequency	“ 11
4.2. Mains connection	“ 11
5. DMX signal functions	Pag. 12
5.1. Connecting DMXsignal	“ 12
5.2. Turning on the projector	“ 12
5.3. DMX addressing	“ 13
5.4. DMX functions	“ 13
6. Test function	Pag. 14
7. Light ON function	Pag. 14
8. DR1 function	Pag. 15
8.1. Setting up functionality using DR1 (FUNC)	“ 15
8.2. Diagnostic functions using DR1 (MEAS)	“ 16
8.3. Error messages using DR1	“ 16
9. Switch panel signals	Pag. 17
10. Thermal protection	Pag. 17
11. Maintenance	Pag. 17
11.1. Replacing blown fuses	“ 17
11.2. Periodic maintenance	“ 17
12. Spare parts	Pag. 17
13. Frequently asked questions	Pag. 18

English

Congratulations on having purchased a **Coemar** product. You have assured yourself of a fixture of the highest quality, both in componentry and in the technology used. We renew our invitation to you to complete the service information on the previous page, to expedite any request for service information or spares (in case of problems encountered either during, or subsequent to, installation). This information will assist in providing prompt and accurate advice from your **Coemar** service centre..

1. Packaging and transportation

Following the instructions and procedures outlined in this manual will ensure the maximum efficiency of this product for years to come.

1.1. Packaging

Open the packaging and ensure that no part of the equipment has suffered damage in transit. In case of damage to the equipment, contact your carrier immediately by telephone or fax, following this with formal notification in writing.

Packing list

Ensure the packaging contains:

- 1 **Panorama Led White**
- 1 **Instruction manual**

1.2. Transportation

The **Panorama Led White** should be transported in either its original packaging or in an appropriate flight case.

2. General information

2.1. Important safety information

Fire prevention:

1. Never locate the fixture on a flammable surface.
2. Minimum distance from flammable materials: 0.5 m.
3. Minimum distance from the closest illuminable surface: 0,5 m.
4. Replace any blown or damaged fuses only with those of identical values. Refer to the schematic diagram if there is any doubt.
5. Connect the projector to mains power via a thermal magnetic circuit breaker.

Prevention against electric shock:

1. High voltage is present in the internals of the unit. Isolate the projector from mains supply prior to performing any function which involves touching the internals of the unit.
2. For mains connection, adhere strictly to the guidelines outlined in this manual.
3. The level of technology inherent in the **Panorama Led White** requires the use of specialised personnel for all service applications; refer all work to your authorised **Coemar** service centre.
4. A good earth connection is essential for proper functioning of the projector. Never operate the unit without proper earth connection.
5. The mains cable should not come into contact with other cabling.
6. Never handle the unit with wet hands or in a damp environment.

Safety:

1. The projector should always be installed with bolts, clamps, and other fixings which are suitably rated to support the weight of the unit.
2. Always use a secondary safety chain of a suitable rating to sustain the weight of the unit in case of the failure of the primary fixing point..
3. Never install the fixture in an enclosed area lacking sufficient air flow; the ambient temperature should not exceed 35°C.
4. The external surface of the unit, at various points, may exceed 80°C. Never handle the unit until at least 10 minutes have elapsed since the unit was turned off..

Protection rating of the body against liquids and solids:

1. The projector has an **IP 66 protection rating**; this indicates that it is protected against dust and significant showers of water. This protection rating allows the fixture to be installed in an exposed location in inclement weather.

2.2. Warranty conditions

1. The fixture is guaranteed for a period of 12 months against manufacturing faults and faulty materials.
2. Faults due to incorrect operation or operation in an inappropriate manner are not covered by the warranty.
3. The warranty is immediately void if the fixture has been operated or serviced by unqualified or unauthorised personnel.
4. The warranty does not include fixture replacement.
5. The model and serial numbers must be supplied for any warranty claims or advice from our authorised service personnel.


2.3. CE Certification

The fixture meets all requirements for CE certification.

3. Installation and connection

3.1. Projector components


The principal components and dimensions of the **Panorama Led White** are shown in the diagram below.

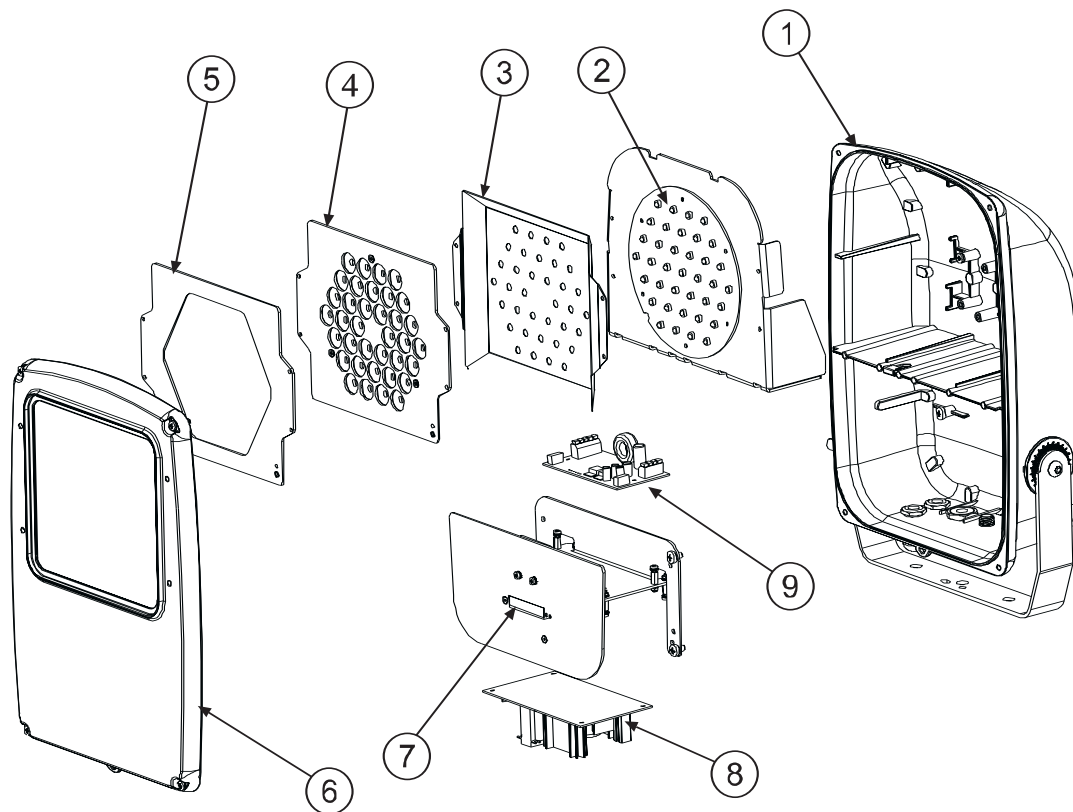

Component description

1. Rear housing
2. Led housing
3. Reflector
4. Lens support (optional)
5. Colour filter holder (optional)
6. Front housing
7. Dip-switch panel
8. Switching power supply
9. Led control pcb

3.2. Dimensions

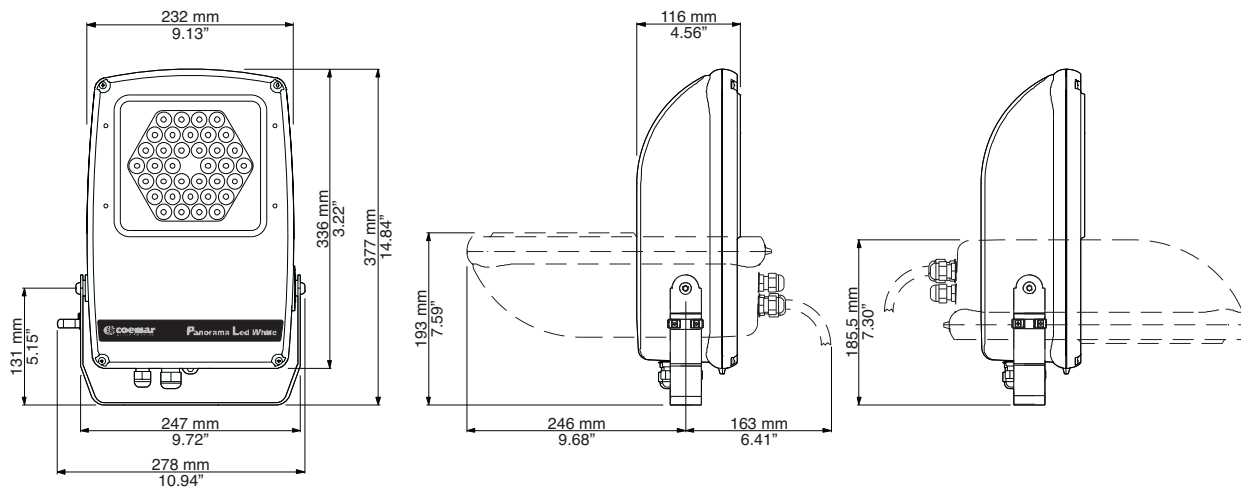


English

3.3. Installation

Due to its high protection rating, the **Panorama Led White** may be installed in any situation including exposed locations and in inclement weather. **Panorama Led White** may be floor mounted or hung from an appropriate structure in any position.


Permanent installation

Use the three holes "A" on the yoke of the **Panorama Led White** for robust, permanent installation.

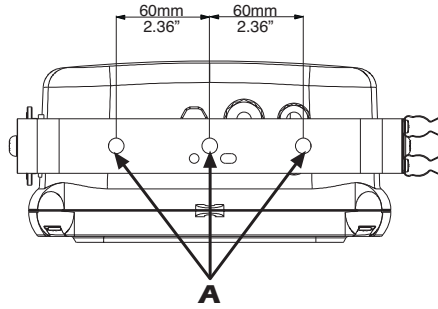

Mobile installations

If hanging the fixture from a lighting truss or similar, we recommend the use of appropriate clamps "B", affixed to the yoke in the holes "A" provided, as shown in the following diagram.

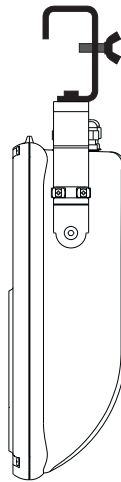


ATTENTION!!

Always ensure that your support structure and fixings (bolts, clamps, etc.) are rated to support the weight of the fixture.

Never install the fixture in a position in an accessible position to personnel who may ignore or be unaware of the safety directions mentioned in this manual.

3.4. Safety chain


When hanging the **Panorama Led White** we recommend the use of a safety chain affixed to the appropriate hole in the fixture and to the suspension device. The safety chain should be either a metal wire rope or a metal chain, both suitably rated for the purpose.

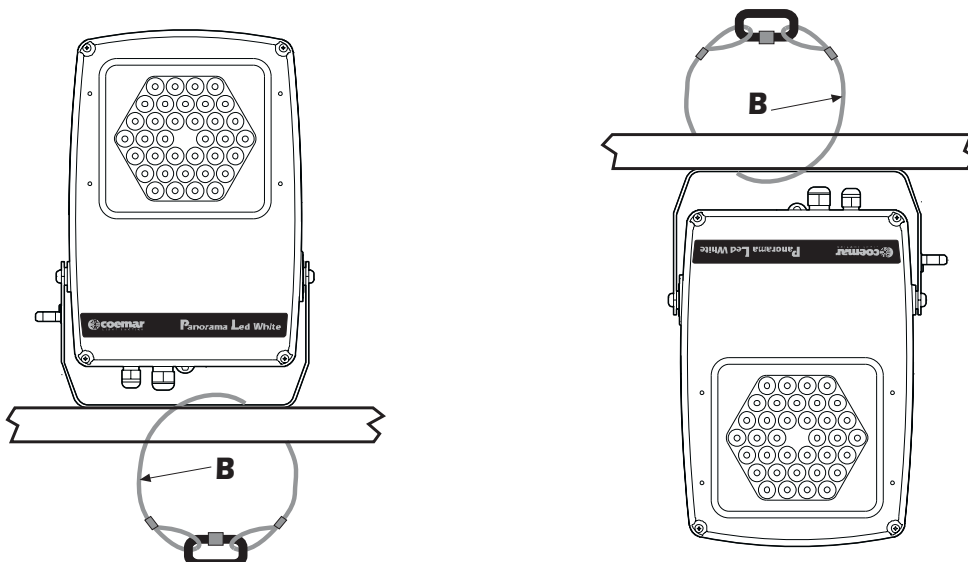


3.5. Adjusting beam direction

The **Panorama Led White** can be tilted to adjust the beam output. To perform this adjustment, follow the instructions set out below.

1. using a suitable tool, loosen the two screws "A" located on the sides of the projector, thus allowing the inclination to be changed.

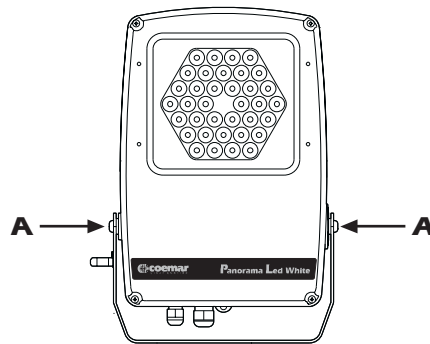

2. Adjust the projector's tilt (from +90° to -90°).

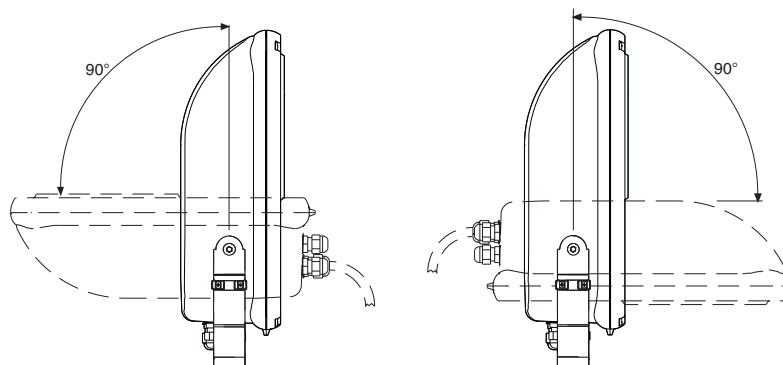


3. Refasten the two screws "A" on the sides of the projector.

3.6. Opening and closing up the projector

The various procedures which follow can only be performed with the projector housing removed.

To gain access to the internals of the projector use a suitable screwdriver to remove the 4 screws "B" which affix the cover.

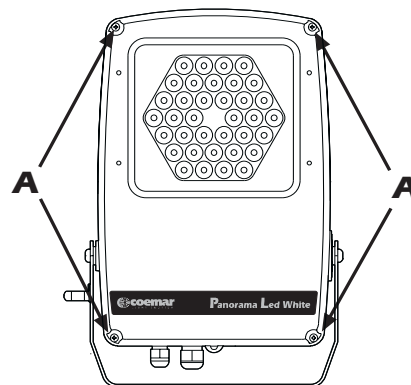

You should now have complete access to the internals of the projector and can proceed to carry out the procedures described below.

ATTENTION!!
Remove mains power prior to opening up the projector..

To close up the projector, replace the housing and reattach the 4 screws previously removed. The housing must be refitted accurately to ensure that the **Panorama Led White** retains its weather and dust proof characteristics.


English

3.7. Adjusting the beam angle


There are several optional interchangeable optical lens groups and filters which enable the beam angle to be adjusted to suit your specific lighting application.

The standard optical lens group for the **Panorama Led White** is parabolic.

The following diagrams illustrate the sequence necessary for replacing the optics of the fixture.

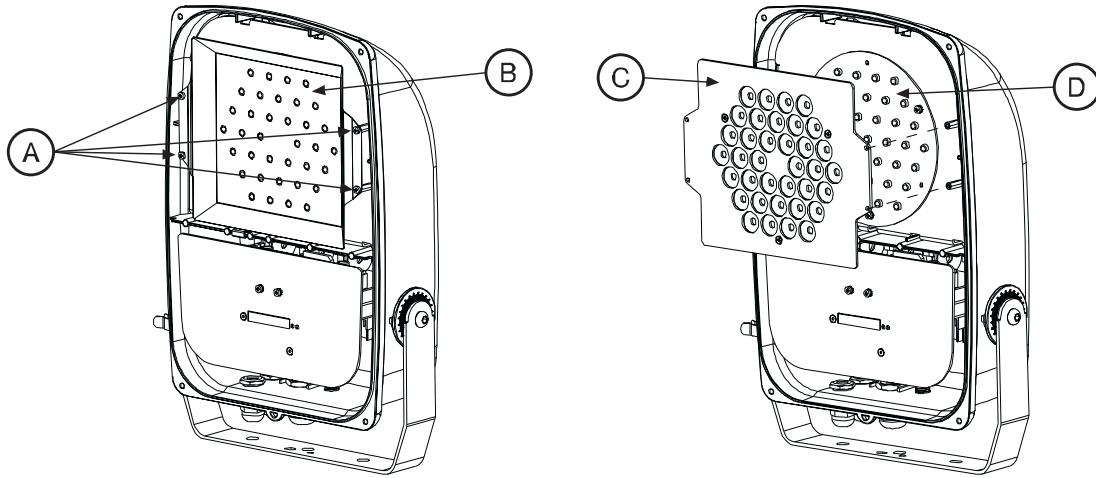

1. Open up the housing as described in section 3.6.
2. Remove the four screws "A".
3. Remove the parabola "B".
4. Insert the desired lens group "C", ensuring that the leds on housing "D" are correctly fitted into the lens seats.

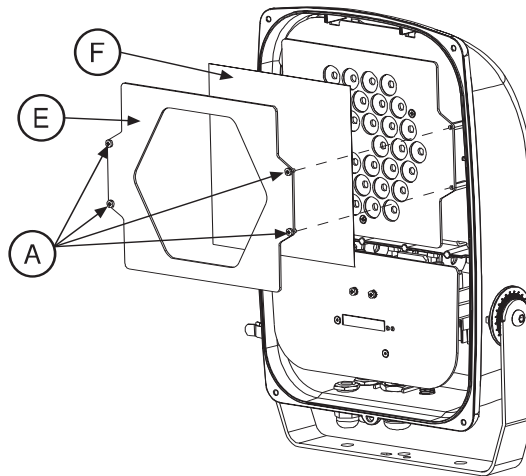

To further adjust and diffuse the beam angle, various filters can be added to the fixture.

5. After having fitted the lens group, insert the filter "F".
6. Fit the appropriate filterholder "E".
7. Refasten the 4 screws "A".
8. Reclose the cover.

The following table details the range of beam angle and diffusion filters available for the **Panorama Led White**.

Optical group	Beam angle
1. Narrow Lenses (cod. 9844)	20°
2. Narrow Lenses + Light Frost Filter (cod. GE07)	26°
3. Narrow Lenses + Frost Filter (cod. GE08)	33°
4. Medium Lenses (cod. 9845)	30°
5. Medium Lenses + Light Frost Filter (cod. GE07)	35°
6. Medium Lenses + Frost Filter (cod. GE08)	45°
7. Flood (standard parabolic)	130°

4. Powering up

4.1. Operating voltage and frequency

The fixture may operate at voltages ranging from 90 to 250V AC at a frequency of 50 or 60 Hz.

It is not necessary to effect any setup procedures, Panorama Led White will automatically adjust its operation to suit any frequency or voltage within this range.

4.2. Mains connection

Cabling

The mains cable provided is a neoprene type HO7RN-F suitable for outdoor applications and complying to the most recent international standards: CEI 20-19, UNEL 35364, CENELEC HD 22.


N.B. In case of cable replacement, similar cable with comparable qualities must be used exclusively (cable 3x1.5 ø external 10 mm, rated 450/750V, operating temperature -25° +60°).

Connection to mains power

for connection purposes, ensure you plug is of a suitable rating:

- 230/240V 0.2 amps constant current.
- 208V 0.25 amps constant current.
- 100/115V 0.5 amps constant current.

Locate the mains cable which exits the base of the unit and connect as shown below:

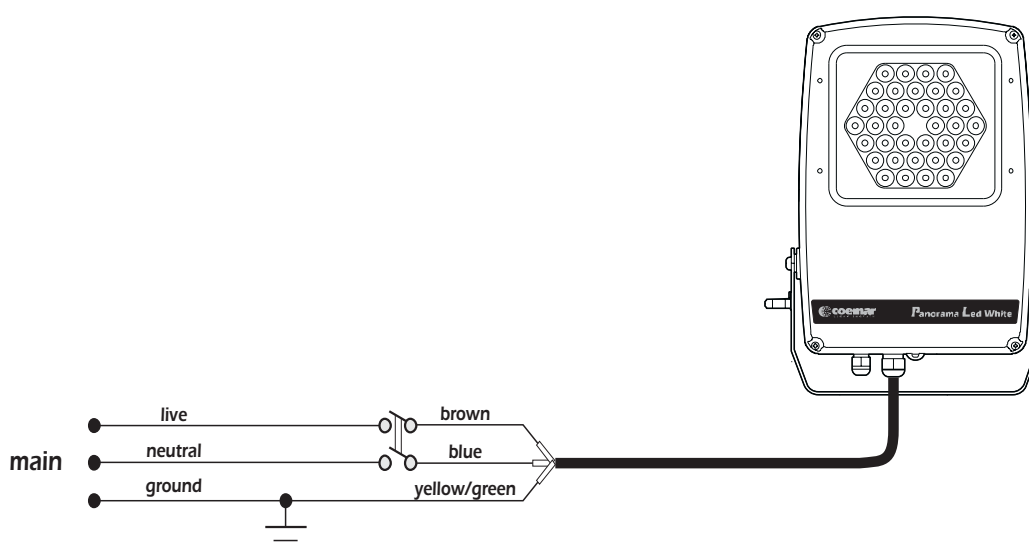

ATTENTION!!

- The use of a thermal/magnetic circuit breaker for each fixture is recommended. Strict adherence to regulatory norms is strongly recommended.
- Panorama Led White should not be powered through a Dimmer as this may damage the internal switching power-supply.
- Prior to connecting the device to mains power, ensure that the mains characteristics are within the recommended range for use with the Panorama Led White.
- A good earth connection is essential for the correct operation of the Panorama Led White. Never install the unit unless the yellow/green earth cable is securely connected.
- All cabling and connections should be carried out by suitably qualified personnel.

5. DMX signal functions

5.1. Connecting DMX signal


Control signal is digital and is transmitted via two pair screened cable, as recommended in international standards for the transmission of DMX512. Connection is serial, utilising the XLR3 sockets located on the base of the **Panorama Led White**. **Coemar** supplies the unit with XLR3 connectors with an IP67 protection rating; use only similar plugs for the connection of signal to the unit, thereby ensuring that the protection rating of the **Panorama Led White** is maintained.

Signal connection via the XLR3 connectors

Connection is to international standards. Connection is as indicated below:

- pin 1 = GND
- pin 2 = data -
- pin 3 = data +

Should your DMX 512 controller output signal via a cannon XLR5 (5 pin), pins 4 and 5 should remain unconnected.

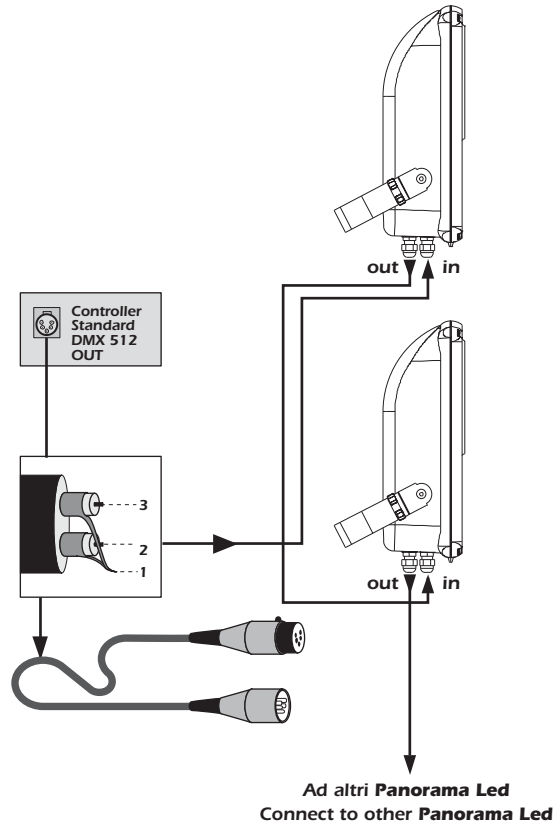

ATTENTION!!

Ensure that all data conductors are isolated from one another, the screening and the metal housing of the connector. Pin number 1 and the housing should never be connected to mains power.

5.2. Powering up

After having followed the preceding steps, turn on mains power on to the unit. The **POWER** led located near the dip-switch panel will come on.

Turning on power with DMX signal connected.

The yellow DMX led will flash to indicate that **DMX 512** is being correctly received. If the yellow led is off, DMX signal is not being received (see section 15. Frequently asked questions).

5.3. DMX addressing



Via the dip-switch panel, it is possible to assign a DMX address to the fixture. The address is determined by the sum of the values associated with the dip switches set to the on position.

Each **Panorama Led White** utilises **2 channels** of **DMX 512** signal for complete control.

IMPORTANT NOTE: the following points are valid for all the instructions which follow.

1. Setting a dip-switch to the **ON** position activates its function
2. The **DMX** address may be altered without the need to turn the **Panorama Led White** off.

The following are examples only for setting DMX addresses.

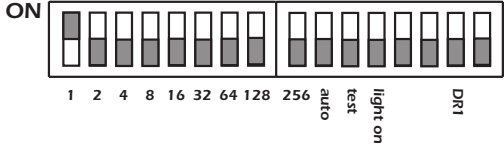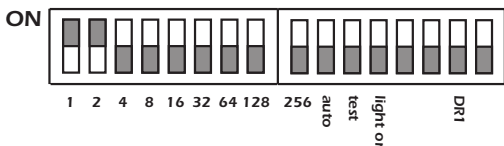	<p>Panorama Led RGB number 1 Address DMX 001 is obtained by setting dip-switch 1 to the ON position</p>
	<p>Panorama Led RGB number 2 Address DMX 003 is obtained by setting dip-switches 1, 2 to the ON position</p>

5.4. DMX functions

channel	function	type of control	effect	decimal		percentage	
				min	max	min	max
1	dimmer	proportional	adjust luminous output intensity from 0 to 100%	0	255	0%	100%
2	strobe effect	step	no effect	0	9	0%	4%
		proportional	variable speed strobing effect, from slow to fast	10	57	4%	22%
		step	stop strobe	58	59	23%	23%
		proportional	sequenced pulse effect, slow closing, fast opening (variable speed pulsing, from slow to fast)	60	108	24%	42%
		step	stop strobe	109	110	43%	43%
		proportional	sequenced pulse effect, fast closing, slow opening (variable speed pulsing, from slow to fast)	111	159	44%	62%
		step	stop strobe	160	161	63%	63%
proportional	random strobe effect with variable speed from slow to fast	162	255	64%	100%		

6. Test function

With the dip-switch set to the ON position, **Panorama Led White** will test each individual channel without the need for a DMX controller to be connected.

For example:

ON

1 2 4 8 16 32 64 128 256 auto test light on DRI

set the dip-switch to **ON** on the **Panorama Led White**.
The fixture will perform a quick sequential channel test

7. Light ON Function

Via this function the leds of the **Panorama Led White** may be set to always on at a predetermined intensity. When set to **ON** the dip-switch, illumination level can be set by a combination of settings as shown in the table below.

dip-switch 1	dip-switch 2	dip-switch 4	Dimmer
on	off	off	illumination level 20%
off	on	off	illumination level 30%
on	on	off	illumination level 40%
off	off	on	illumination level 50%
on	off	on	illumination level 60%
off	on	on	illumination level 80%
on	on	on	illumination level 100%

Other examples of possible setting combinations are shown below.

ON

1 2 4 8 16 32 64 128 256 auto test light on DRI

LIGHT ON dip-switch set to **ON**
illumination level at **20%** (dip-switch **1** set to **ON**)

ON

1 2 4 8 16 32 64 128 256 auto test light on DRI

LIGHT ON dip-switch set to **ON**
illumination level at **80%** (dip-switches **2, 4** set to **ON**)

ATTENTION!!

Setting the Light ON dip-switch to active inhibits control via DMX signal.
The three dip-switches set to the OFF position turn off the light.

8. DR1 function

This function allows for the transmission of bidirectional data with the **DR1** (cod. CO9703). Via the **DR1** (display remote) it is possible to remotely access, view and alter all the fixture's parameters and settings.

The **DR1** remote display unit allows the user to:

Monitor:

- 1) the current Software Version loaded
- 2) temperature
- 3) led operating life
- 4) projector operating life
- 5) presence and characteristics of incoming DMX 512
- 6) error messages
- 7) ID code
- 8) alarms


Edit and set:

- 1) DMX address
- 2) force leds on

To initiate communications with the **Panorama Led White** the **DR1** must be installed into the DMX signal chain between the fixture and the controller following the instructions located internally on the unit.


The **DR1** dip-switch must be set to the **ON position**; from this point on, dip-switches 1 to 128 take on the task of assigning an identifying value (ID) to the fixture. They no longer set the fixture's DMX address, which is done by the **DR1**. The maximum number of unique IDs available in the **DR1** system is 250; dip-switch 256 has no functionality.

An example of a possible configuration is shown below:

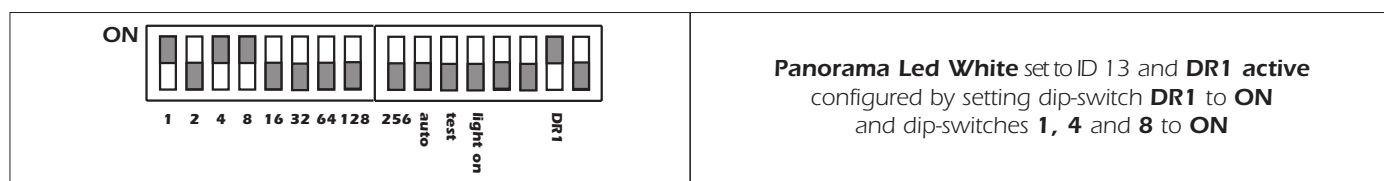

8.1. Setting up functionality via DR1 (FUNC)

Using the inbuilt functionality of the **Panorama Led White** via the **DR1**, it is possible to alter the function settings of the fixture. The following diagram illustrates the menu navigation system of the **DR1** in **FUNC**.

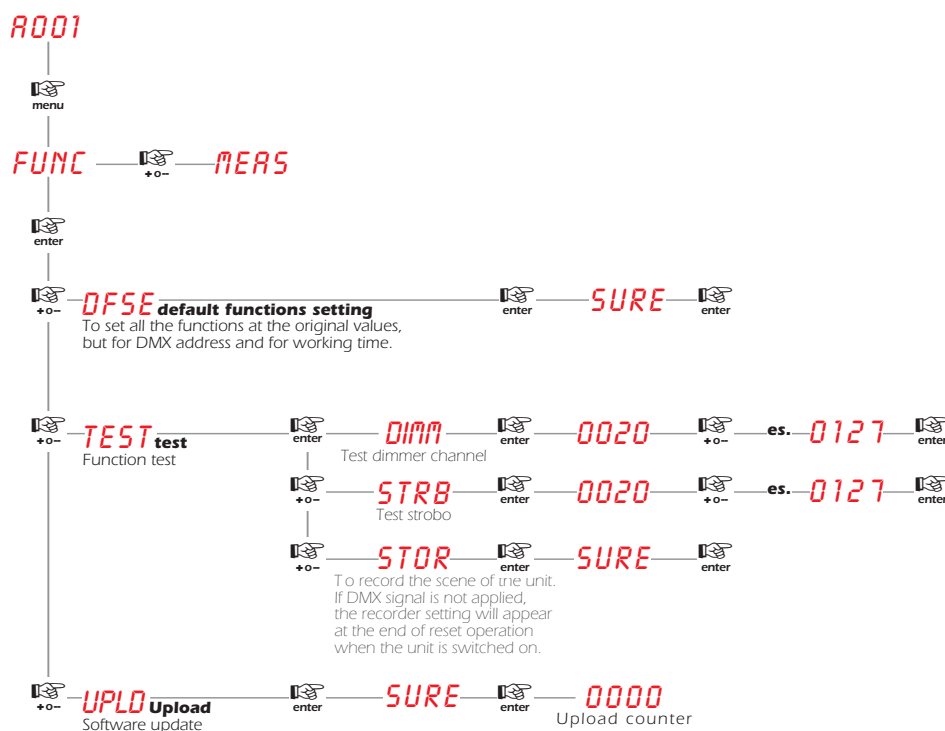


UPLOAD function

Using this function it is possible to upload software to the **Panorama Led White** using a **DR1** and a PC. For further information, consult the **DR1** manual.

8.2. Diagnostic functions using DR1 (MEAS)

Using **MEAS** mode, it is possible to carry out several digital parameters checks and autodiagnosics. The following diagram illustrates the menu navigation system of the **DR1** in **MEAS**.

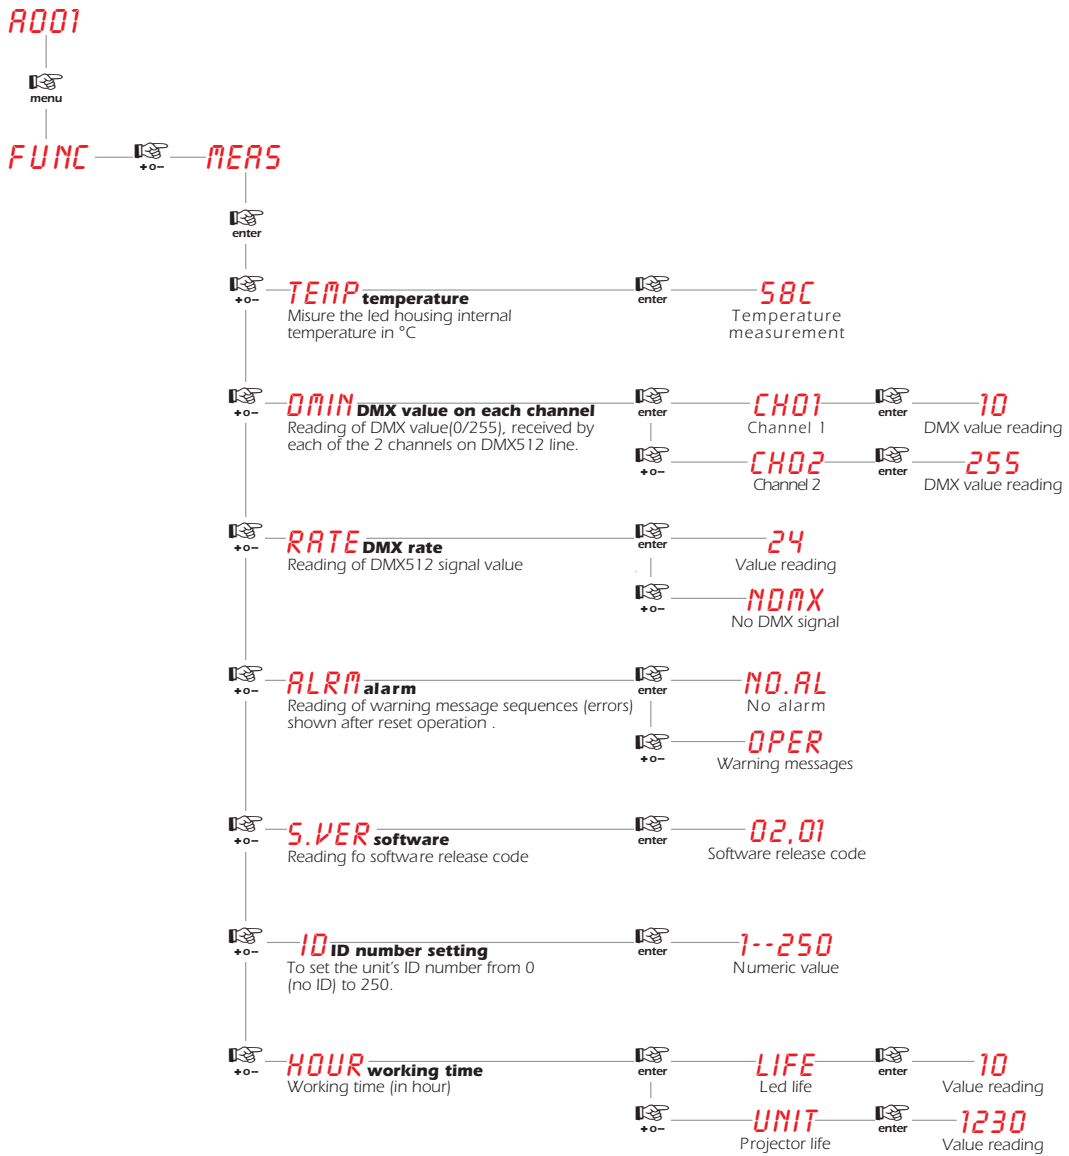

8.3. Error messages using DR1

MESSAGE CODE	DESCRIPTION
DTER	DATA Error The initial configuration settings are faulty or have been loaded incorrectly. The projector has loaded its default configuration. Turn the projector off and on again and if the error persists teh EEPROM is either defective or absent; refer to your Coemar service centre for a replacement component.
ADER	DMX ADDRESS Error The projector is not receiving all the DMX channels necessary for its operation. Check the DMX address and the control console operation. Note that some controllers may not generate all 512 channels of signal.

9. Switch panel signal

The two leds on the dip-switch panel indicate the functionality of the **Panorama Led White**.

Led	Function	Led on	Led off	Led flashing
Green	Power	Present	Absent	Undefined
Yellow	DMX state	DMX poorly connected	No DMX signal	DMX OK

10. Thermal protection

A thermal sensor in the body of the **Panorama Led White** protects the fixture against overheating. The sensor operates by removing power to the leds should the operating temperature exceed the factory preset.

11. Maintenance


Whilst every possible precaution has been taken to ensure the trouble-free operation of your **Panorama Led White**, the following periodic maintenance is highly recommended. We recommend that the voltage to the unit be removed prior to any maintenance procedure taking place.

ATTENTION!!

Always remove mains power prior to opening up the fixture!

11.1. Fuse replacement

Use a multimeter to check the fuse, replacing any faulty or damaged fuse with ones of equal value, dimensions and characteristics. The following diagram indicates the positioning and characteristics of the protection fuse in the fixture.

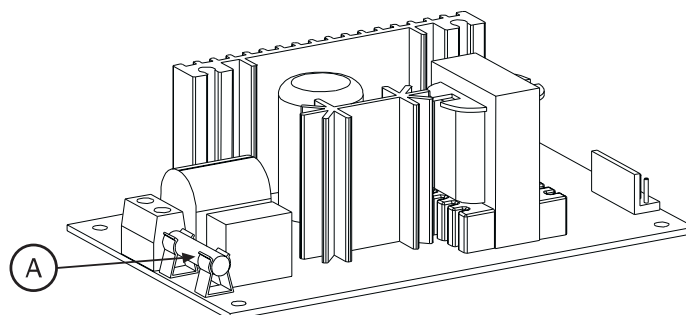

Fuse "A": 4A T 250V

11.2. Periodic maintenance

Mechanicals

Periodically check all mechanical devices for wear and tear, replacing them if necessary. Periodically check the lubrication of all components, particularly the parts subject to high temperatures. If necessary, lubricate with suitable lubricant, available from your **Coemar** distributor.

Electrical components

Check all electrical components for correct earthing, oxidation and proper attachment of all connectors, cleaning and refastening if necessary.

12. Spare parts

All the components of the **Panorama Led White** are available as spare parts from your **Coemar service centre**.

Accurate description of the fixture, model number, and type will assist us in providing for your requirements in an efficient and effective manner.

13. Frequently asked questions

The diagram below indicates some possible problems and solutions if they should occur.

Problem	Possible solution
Panorama Led RGB won't turn on.	Mains power is not available to the Panorama Led RGB : - Check that the green Led is on, if so check the incoming voltage to the Panorama Led RGB . - Check the main pcb fuse and that of the switching powersupply.
Panorama Led RGB doesn't respond to DMX signal	Incoming DMX may not be being received by the Panorama Led RGB : - check that the led indicating DMX input is flashing. If not, check the DMX console's output and any cabling for continuity. - Check the dip-switch panel to ensure that no functions are selected which inhibit DMX control . - Panorama Led RGB may be incorrectly addressed. Check the DMX addressing.



coemar spa

via Inghilterra
46042 Castelfreddo (Mantova) Italy
Tel. 0376/77521
Fax 0376/780657

Coemar si riserva il diritto di apportare modifiche senza preavviso.
Coemar reserves the right to effect modifications without notification

manuale istruzioni
instruction manual
Panorama Led White
1[^] edizione Maggio 2005
1st edition May 2005