## S-150/DMX

150 WATT High Power Professional Strobe Light

CAUTION! Read instructions before installing or plugging unit in.

SPECIFICATIONS: MODEL - S-150/DMX

Weight: 9lbs.

3.25" x 9.25" x 9.5" Size:

ZB-150 - (BT 200H) Lamp:

Fuse: 10A Internal

Supply Voltage: 120V

Working Position: Any Safe position

Duty Cycle: 5 min. ON/ 5 min. OFF



Congratulations on your purchase of this high quality American DJ® product. For your convenience the S-150/DMX has been lamped and is ready to be used. Please read the following instructions before installing or using your new S-150/DMX. Thank you for purchasing the S-150/DMX by American DJ®.

## **CONTROLS & FUNCTIONS (REAR):**


- 1. POWER INPUT: AC 120V-60Hz, 10A
- 2. FUSE: F10A 250V
- 3. POWER SWITCH: Press down to turn the power on.
- 4. POWER INDICATOR: Indicates when power is on.

printed on the rear for desired speed and dimming settings. Assign dip switch 10 to OFF, this unit is in self-test mode, follow self-test settings to select desire

- **6. DMX INDICATOR:** Indicates when DMX is effective.
- 7. DMX SIGNAL INPUT: XLR male socket, use to receive DMX signals.
- 8. DMX SIGNAL OUTPUT: XLR female socket, use to connect another S-150/DMX.


## **OPERATING INSTRUCTIONS:**

- 1. Please confirm power input is matched with that specified on this unit.
- 2. Plug in power cord and turn the power on.
- 3. This unit has two operating modesL self-test mode and DMX pack mode.
- 4. Switch dip switch 10 to OFF position, this unit is in self-test mode. There are two self-test modes: AUTO and MANUAL. Set dip switch 9 to OFF, it performs AUTO self-test. When strobe flashes within the dimming range from 0 to 100% and then from 100 to 0%, a slower or faster speed will be executed. This strobe will flash with the regular speed corresponding to the variety of the duration of dimmer. Set dip switch 9 to ON, it performs MANUAL self-test. Dip switch 1, 2, 3 and 4 are assigned to control speed, and dip switch 5, 6, 7, and 8 are assigned to adjust dimming level.
- 5. Switch dip switch 10 to ON position, this unit is in DMX pack mode. Follow DMX address settings printed on the rear for desired flash speed and dimmer.
- 6. For safety, disconnect power cable when not in use.

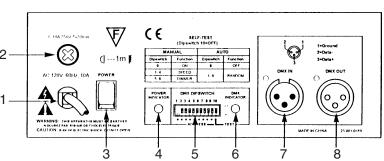

## **APPENDIX**

1. In DMX pack mode, please refer to the following illustrations for desired channel setting.

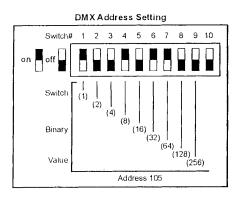

DMX Address Table (Dipswitch10=ON)						
START CH#	SWITCHS ON	ON START SWITCH				
1	1	11	1, 2, 4			
2	2	12	3, 4			
3	1, 2	13	1, 3, 4			
4	3	14	2, 3, 4			
5	1, 3	15	1, 2, 3, 4			
6	2, 3	16	5			
7	1, 2, 3	:	:			
8	4	:	:			
9	1, 4	:	:			
10	2, 4	511	1,2,3,4,5,6,7,8,9			

2. In self-test mode, please follow the below table for desired chase:

Self-test (Dipswitch 10=OFF)

MANUAL		AUTO		
Dipswitch	Function	Dipswitch	Function	
9	ON	9	OFF	
1~4	SPEED	1~8	RANDOM	
5~8	DIMMER	1~8		

3. In MANUAL of self-test mode, speed and dimmer are classified as 16 levels respectively, and are as follows:

1	Level	Dip switch 1 2 3 4	Speed		
3	1		Slowest		
4	2				
5	3				
6	4				
7	5				
8	6				
9 10 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	7				
10 11 11	8				
11	9				
	10				
42	11				
'4   0     0	12	8 8 8			
13	13				
14	14				
15	15		1		
16 Fastest	16		Fastest		

	Ь	ip s	wit	ch	П		
Level	5	6	7	8		Dimme	
1						Min.	
2							
3		8					
4							
5							
6	8						
7							
8		8					
9					Į		
10				5			
11				H			
12							
13							
14							
15							
16					_[	Max.	