



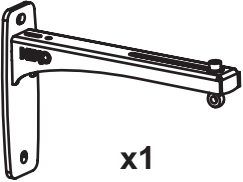








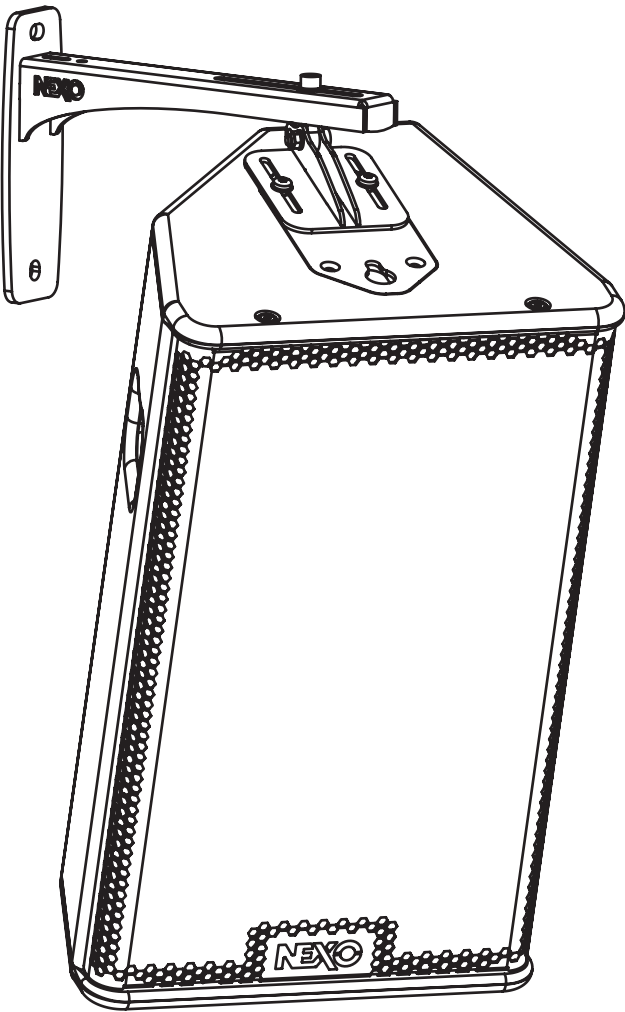

VNI-WS10
PS10 WALL BRACKET



CONTENTS

 x1	 x1	 x1
 x1	 x2	 x3
 x1	 x1	 x1
		 x1

VNI-WS10


PS10 WALL BRACKET

Adapter Mounting

1 - Take away 2 screws of origin and use the 2 screws and the 2 washers provided to fix the adapter.
Attention , please do not push on the two screws while screwing them , so as to avoid disengaging the bolt that is inside the cabinet.












2 - Choose 1 of the 4 mounting positions- in function of the desired tilt.

FASTENERS

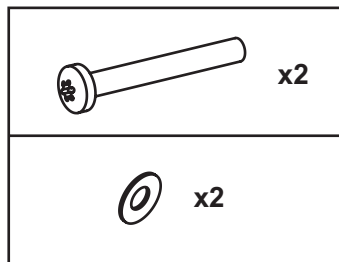

WARNING :


Screws must be secured using Loctite 243™

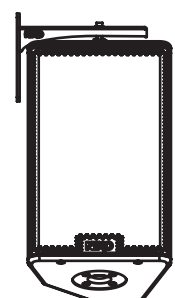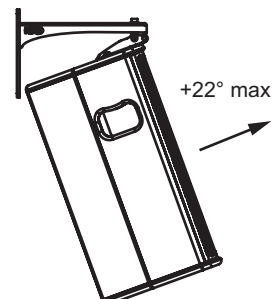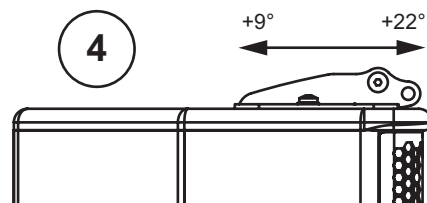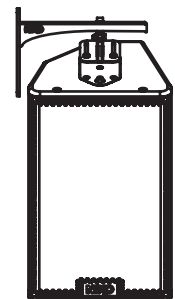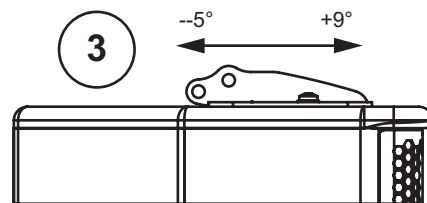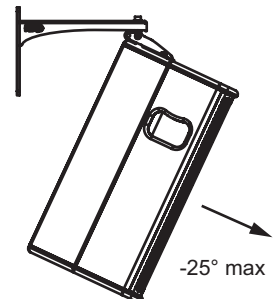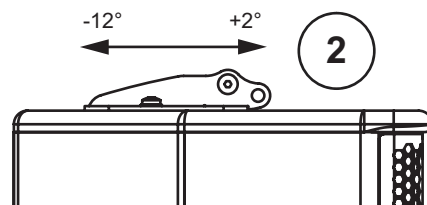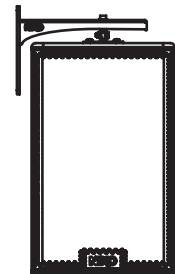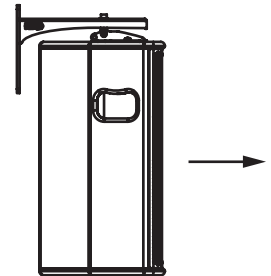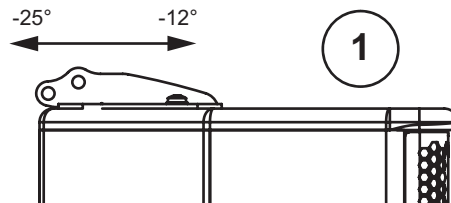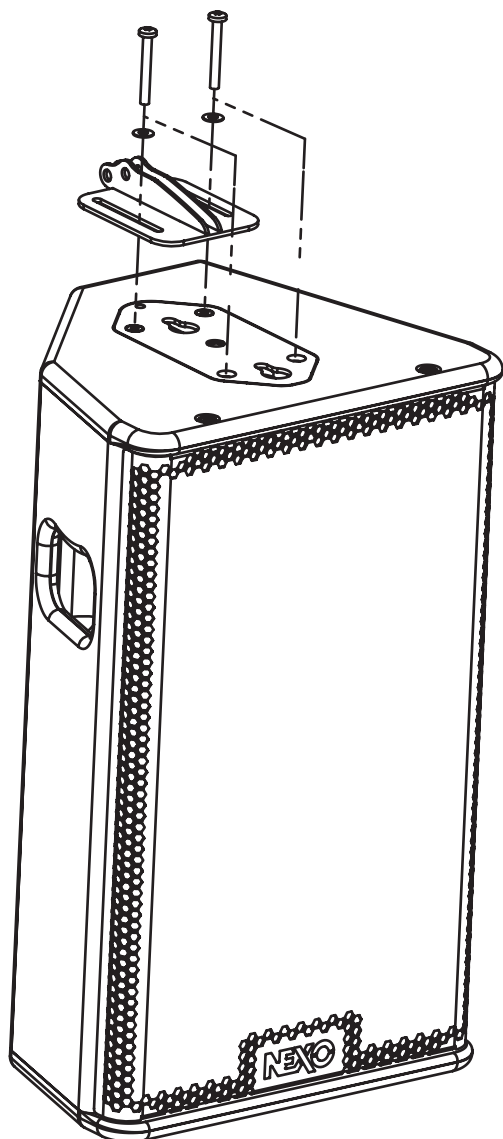




VNI-WS10


PS10 WALL BRACKET

Adapter / Arm Mounting

 Tighten well to cancel any float between the arm and adapter.

FASTENERS

	x1
	x1
	x1

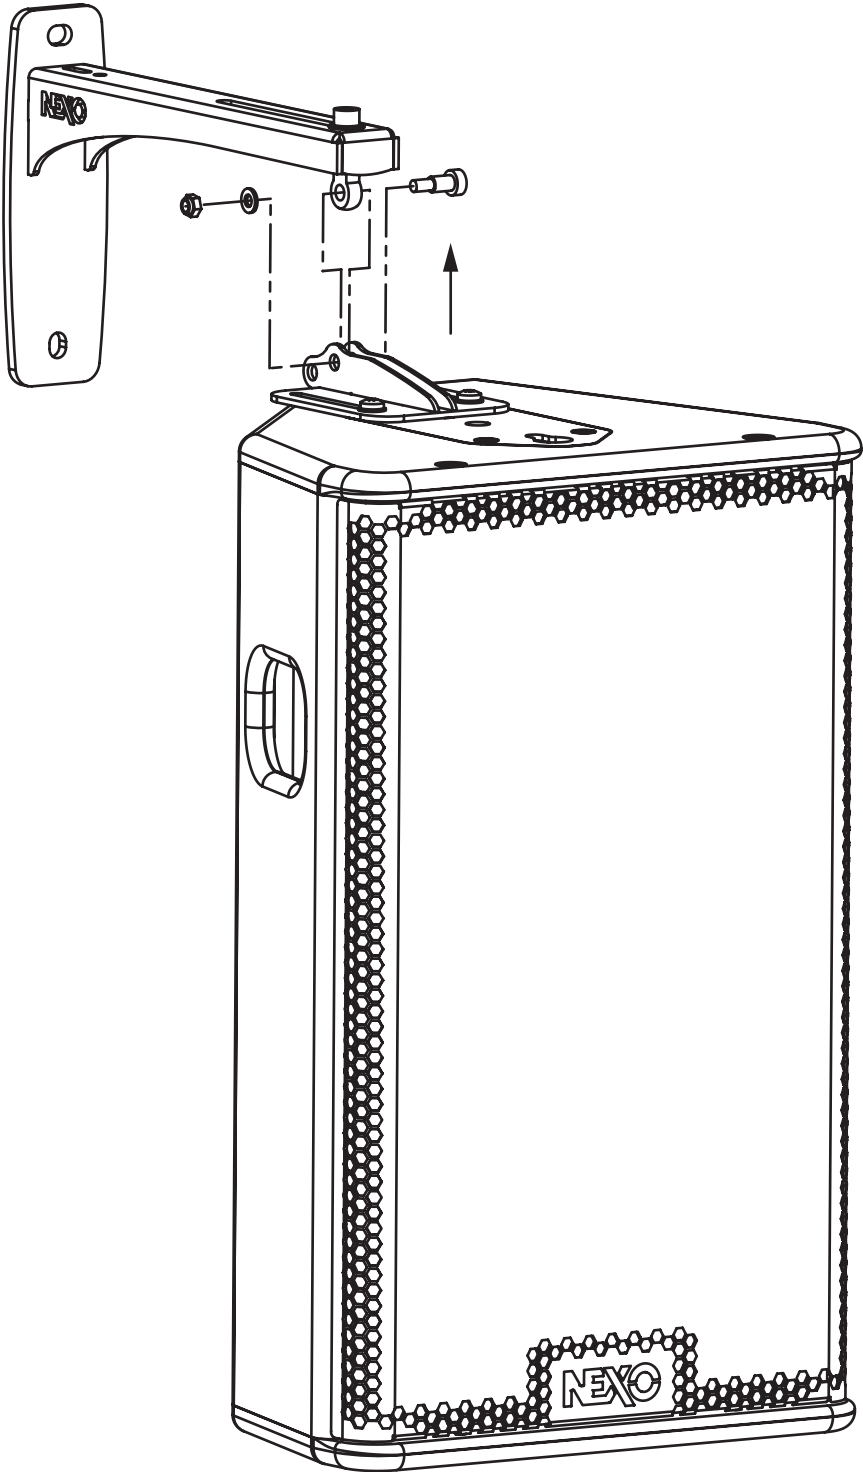

VNI-WS10

PS10 WALL BRACKET

Safety Device Mounting

FASTENERS

